

## CONTENTS

### PILE DRIVING EQUIPMENT

	Page
Section 1. INTRODUCTION . . . . .	38.4-1
1. Scope . . . . .	38.4-1
2. Cancellation . . . . .	38.4-1
3. Hearing Conservation . . . . .	38.4-1
4. Related Criteria . . . . .	38.4-1
Section 2. SELECTION OF METHOD OF INSTALLATION . . . . .	38.4-2
1. Methods in Common Use . . . . .	38.4-2
2. Selection Factors . . . . .	38.4-2
Section 3. IMPACT DRIVING-SELECTION OF EQUIPMENT . . . . .	38.4-3
1. Selecting the Hammer . . . . .	38.4-3
2. Selecting the Driving Rig . . . . .	38.4-7
3. Selecting the Type of Leads . . . . .	38.4-17
4. Selecting the Power Equipment . . . . .	38.4-25
5. Selecting Accessories . . . . .	38.4-25
Section 4. PILE DRIVING BY USE OF VIBRATORY HAMMER . . . . .	38.4-34
1. Types of Vibratory Hammer . . . . .	38.4-34
2. Areas of Application for the Vibratory Hammer . . . . .	38.4-34
3. Some Tips on Use of Vibratory Hammers . . . . .	38.4-39
Section 5. PILE INSTALLATION BY VARIOUS DEVICES . . . . .	38.4-40
1. Underwater Driving . . . . .	38.4-40
2. Jetting . . . . .	38.4-40
3. Preboring, Jacking, Screwing, and Pull-Down Methods . . . . .	38.4-43
4. Special Considerations Relative to Installing Piles in Permafrost Areas . . . . .	38.4-43
Section 6. SOME GUIDES FOR THE PILE DRIVING FOREMAN AND INSPECTOR . .	38.4-45
1. Introduction . . . . .	38.4-45
2. Some Preliminary Matters . . . . .	38.4-45
3. Condition of Hammer and Power Equipment . . . . .	38.4-45
4. Speed of Hammer . . . . .	38.4-46
5. Cushion or Cap Block . . . . .	38.4-46
6. Followers . . . . .	38.4-46
7. Distortion of the Pile Axis . . . . .	38.4-47
8. Damage During Driving . . . . .	38.4-47
9. Sustained Driving Resistance . . . . .	38.4-51
10. Excessive Variation in Pile Length . . . . .	38.4-51
11. Minimum Energy of Hammer . . . . .	38.4-54
12. Where Driving is Interrupted . . . . .	38.4-54
13. Jetting . . . . .	38.4-54
14. Sequence of Installation and Too-Close Spacing . . . . .	38.4-54
15. Heaved Piles . . . . .	38.4-54
References . . . . .	Reference-1
APPENDIX A: Metric Conversion Factors . . . . .	A-1

## FIGURES

<u>Figure</u>	<u>Title</u>	<u>Page</u>
1	Physical Effects of Various Combinations of Vibration Frequency and Amplitude . . . . .	38.4-4
2	Correlations of Standard Penetration Resistance . . . . .	38.4-8
3	Underwater Hammer for Use in Deep Water . . . . .	38.4-10
4	Commercial Crane (Crawler) Adapted for Pile Driving . . . . .	38.4-15
5	Typical Boom Adapters . . . . .	38.4-16
6	Types of Leads . . . . .	38.4-18
7	Leads--Stabbing Points . . . . .	38.4-23
8	Miscellaneous Lead Accessories . . . . .	38.4-24
9	Typical Pile Shoes . . . . .	38.4-27
10	Typical Driving Caps . . . . .	38.4-29
11	Typical Splices for Piles . . . . .	38.4-30
12	Typical Details of Followers . . . . .	38.4-32
13	Details of Types of Mandrels . . . . .	38.4-33
14	Miscellaneous Accessories for Pile Driving . . . . .	38.4-35
15	Vibratory Hammer . . . . .	38.4-37
16	Typical Jetting Arrangements . . . . .	38.4-41
17	Effects of Distortion of Pile Caps . . . . .	38.4-48
18	Damage to Piling Due to Driving . . . . .	38.4-49
19	Damage to Steel "H" Piles Due to Overdriving . . . . .	38.4-50
20	The Equivalent Footing Analogy . . . . .	38.4-52

## TABLES

<u>Table</u>	<u>Title</u>	<u>Page</u>
1	Pile Hammers - Characteristics . . . . .	38.4-5
2	Suggested Minimum Hammer Energy - Impact Hammers . . . . .	38.4-6
3	Supplementary Procedures and Appurtenances Used in Pile Driving . . . . .	38.4-9
4	Data on Impact Type Pile Hammers in Current Manufacture . . . . .	38.4-11
5	Data on Discontinued Models of Impact Type Pile Hammers . . . . .	38.4-13
6	Data on Impact Type Pile Extractors . . . . .	38.4-14
7	Size of Pumps Needed to Secure a Specified Discharge . . . . .	38.4-42
8	Approximate Discharge in Gallons Per Minute From Nozzles Attached to 50 ft. of 2-1/2 in. Pipe or Hose . . . . .	38.4-42
9	Loss of Pressure by Friction in Jet Pipe and Hose . . . . .	38.4-43